


SKIOLD MINI PROPORTIONER

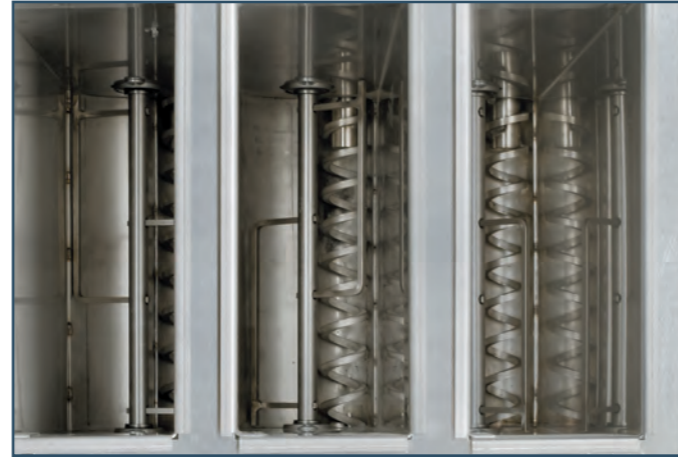


The SKIOLD Mini Proportioner is suitable for adding of micro components, such as vitamins, medicine, zinc, acids in dry form etc., in feed production plants. The proportioning accuracy is +/- 25 g (wheat meal).

The system consists of a basic unit for up to 3 proportioning bins, each of approx. 30 litres, a load cell, a weighing amplifier and a weighing platform. 1-3 proportioning units can be mounted in the basic unit according to requirement. If more than 3 proportioning units are required, the system can be extended by extra basic units.


During the grinding process the micro components are proportioned one by one into e.g. a horizontal auger transport from the disc mill, so that the relatively small quantities are "flushed" along in the transport system and lifted up into the mixer. The proportioning capacity

is approx. 2 litres /min.

The system works according to the "loss in weight" principle, i.e. the whole proportioning unit is weighed, and the weight reduction corresponds to the quantity proportioned. Only one component can be proportioned at a time, and the proportioning unit should not be re-filled during proportioning.

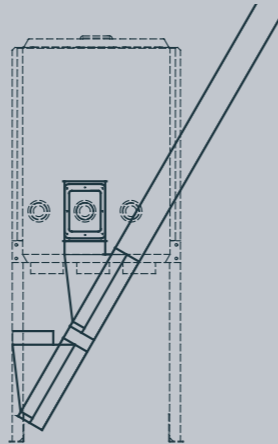

DIMENSIONAL SKETCHES

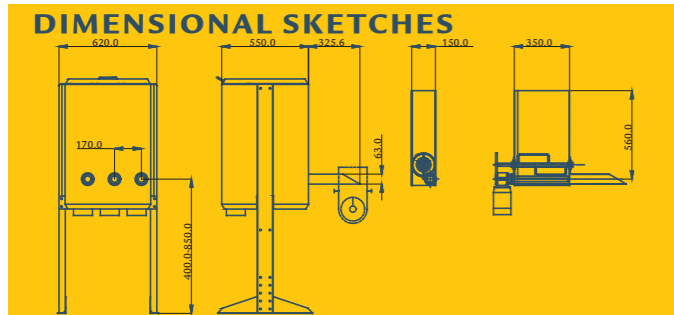

SKIOLD MINI PROPORTIONER



SKIOLD MAKES THE DIFFERENCE!

- Computer controlled proportioning of micro components (vitamins, zinc, medicine, acids in dry form etc.)
- Flexible construction
- Large proportioning accuracy
- Stainless steel construction of parts in contact with media
- Easy incorporation into existing plants




SKIOLDA/S
Kjeldgaardsvej 3
DK-9300 Sæby · Denmark
Tel: +45 99 89 88 87
Fax: +45 99 89 88 77
www.skiold.com · skiold@skiold.com



Vacuum & Milling Solutions
PO Box 869
Jimboomba Qld 4280 . Australia
Ph: 0417 447 952
Fax: 0755 477 677
Email: martin@vacmillsolutions.com.au
www.vacmillsolutions.com.au



SKIOLD MINI PROPORTIONER

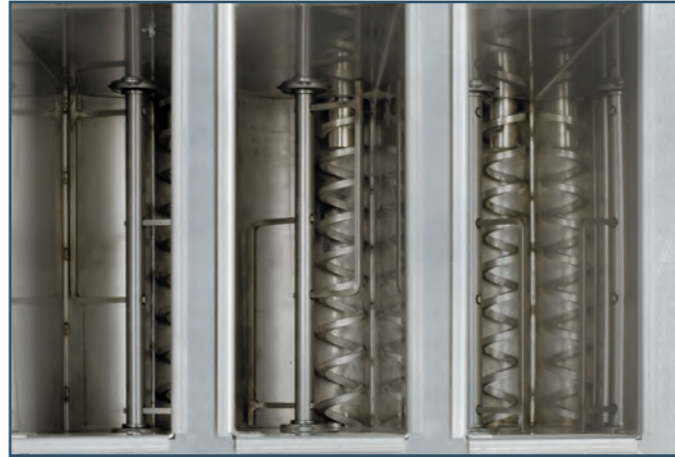


The SKIOLD Mini Proportioner is suitable for adding of micro components, such as vitamins, medicine, zinc, acids in dry form etc., in feed production plants. The proportioning accuracy is +/- 25 g (wheat meal).

The system consists of a basic unit for up to 3 proportioning bins, each of approx. 30 litres, a load cell, a weighing amplifier and a weighing platform. 1-3 proportioning units can be mounted in the basic unit according to requirement. If more than 3 proportioning units are required, the system can be extended by extra basic units.


During the grinding process the micro components are proportioned one by one into e.g. a horizontal auger transport from the disc mill, so that the relatively small quantities are "flushed" along in the transport system and lifted up into the mixer. The proportioning capacity

is approx. 2 litres /min.

The system works according to the "loss in weight" principle, i.e. the whole proportioning unit is weighed, and the weight reduction corresponds to the quantity proportioned. Only one component can be proportioned at a time, and the proportioning unit should not be re-filled during proportioning.

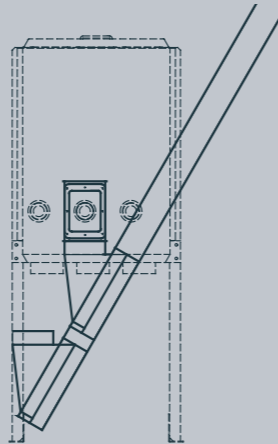

DIMENSIONAL SKETCHES

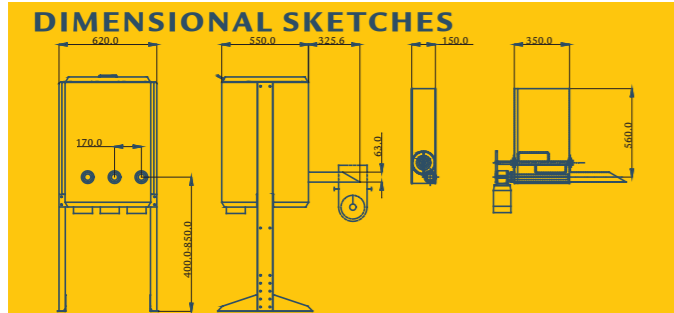

SKIOLD MINI PROPORTIONER



SKIOLD MAKES THE DIFFERENCE!

- Computer controlled proportioning of micro components (vitamins, zinc, medicine, acids in dry form etc.)
- Flexible construction
- Large proportioning accuracy
- Stainless steel construction of parts in contact with media
- Easy incorporation into existing plants



SKIOLDA/S
Kjeldgaardsvej 3
DK-9300 Sæby · Denmark
Tel: +45 99 89 88 87
Fax: +45 99 89 88 77
www.skiold.com · skiold@skiold.com



Vacuum & Milling Solutions
PO Box 869
Jimboomba Qld 4280 . Australia
Ph: 0417 447 952
Fax: 0755 477 677
Email: martin@vacmillsolutions.com.au
www.vacmillsolutions.com.au

